



REJECTION CRITERIA FOR WEBBING SLINGS

Webbing slings must be inspected before each use to detect possible damages or errors.

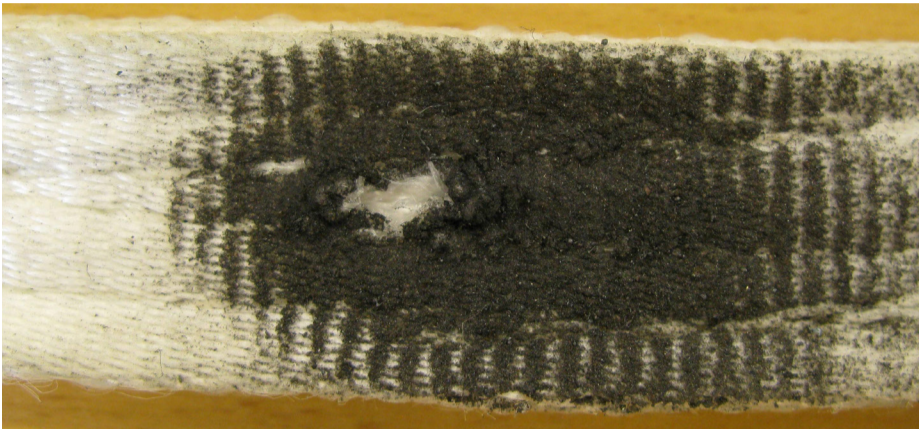


Damage caused by welding or other spark

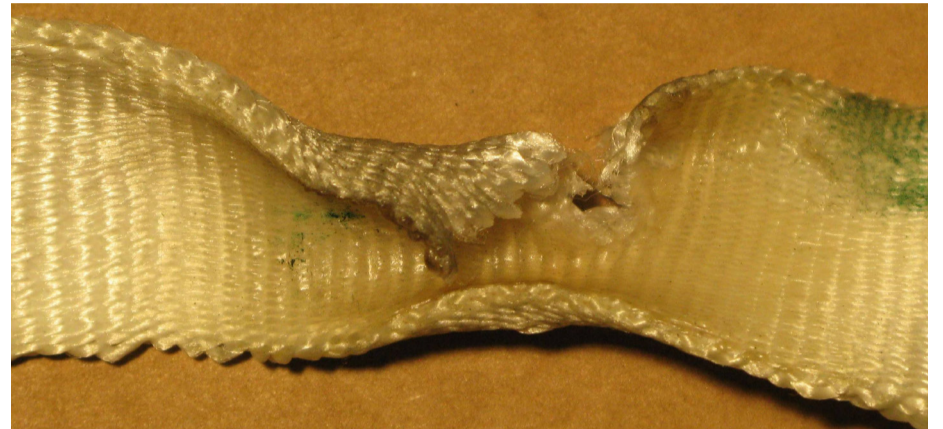

Heat damage




Knot

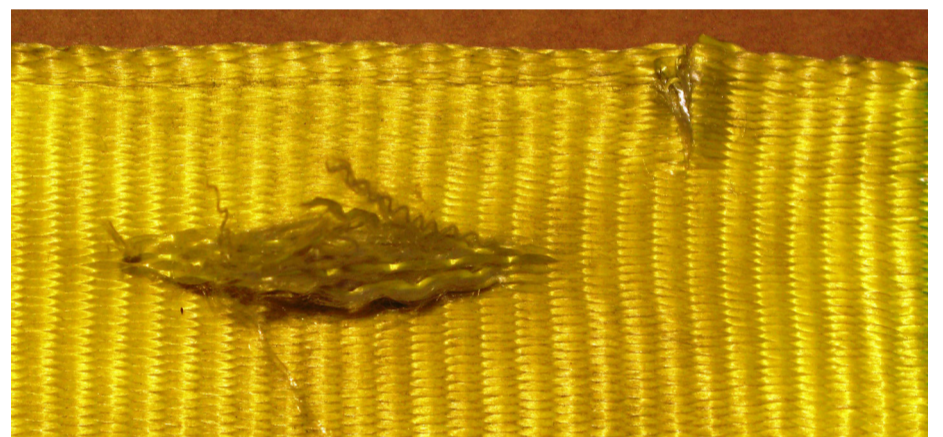


Weft thread broken, cut




Ripped stitching

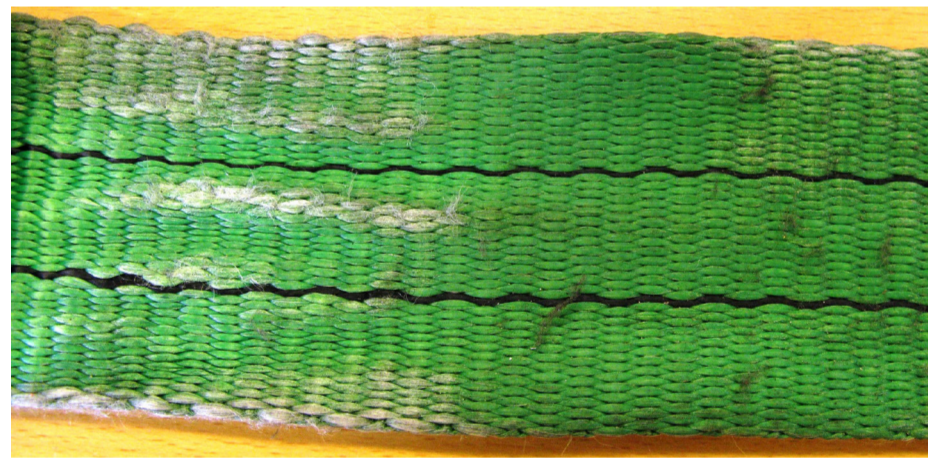

Friction damage

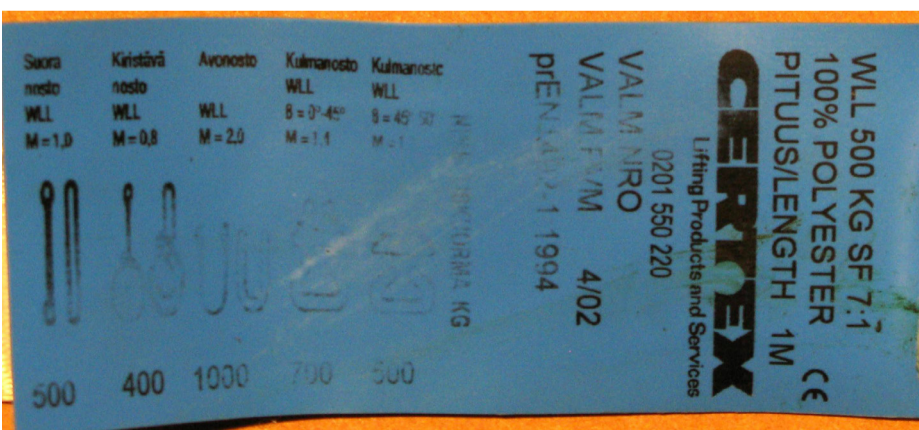

Label can not be read

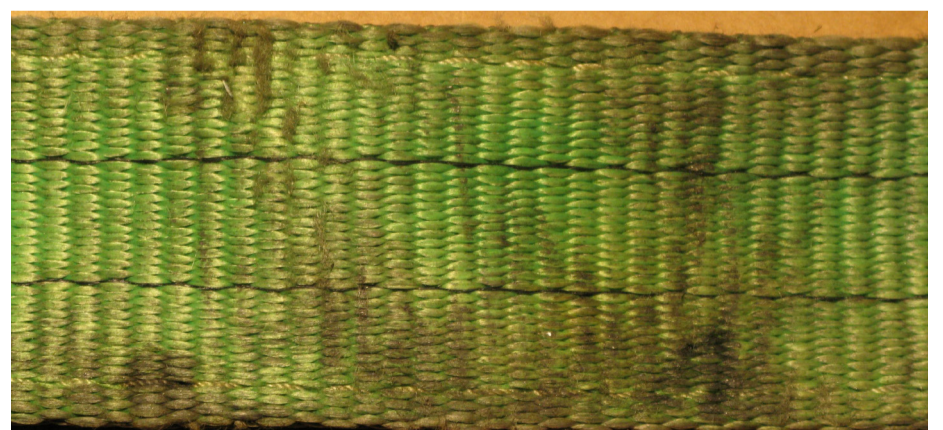

Chemical damage